

Trend Makers®

POWERFlex™ Hose XTREME

Please read the following important information about your new PowerFlex™ Hose.

- The PowerFlex™ Hose must be used with a sprayer or an on/off ball valve attached.
- The PowerFlex™ Hose is intended for outdoor use only; do not use the hose inside.
- Do not drink from the hose or use the hose to supply drinking water for humans or animals. An outdoor hose may be exposed to conditions that can be hazardous to human and animal health.
- The PowerFlex™ Hose is a general outdoor water hose. Do not stretch the hose or use the hose for any purpose other than standard outdoor watering tasks.
- The PowerFlex™ Hose is intended to expand only with use of water. If stretched while drained, the hose can quickly retract and cause bodily harm. Do not stretch the hose.
- The PowerFlex™ Hose is intended to be drained after each use. Do not leave the hose under pressure when not in use. Drain the hose completely before storage and store indoors during extreme hot (above 120° F/49° C) or cold temperatures (below 20° F/-6.7° C). Do not leave the hose in the sun for extended periods of time.


CAUTION: Extreme caution should always be used when the hose is in a stretched and drained condition as the PowerFlex™ Hose retracts like a giant rubber band.

 **WARNING:** Do not allow children to play with or near the PowerFlex™ Hose.

Instructions for Use

1. Before use, ensure that all rubber washers are inserted into the coupling side of the hose and sprayer. **CAUTION:** Do not over tighten the couplings. Over tightening might damage the washer and coupling. Hand tighten to a snug fit. Do not use tools to tighten.
2. Attach the PowerFlex™ Hose to a spray nozzle or an on/off ball valve.
3. Attach the hose to an outside spigot. Gradually turn the water on and allow the hose to expand to full length. The PowerFlex™ Hose is now ready for watering tasks.
4. When finished, turn the water off at the spigot, squeeze the spray nozzle, and allow the water to drain. The hose will retract to its reduced size.

CAUTION: The hose is intended to retract when water is turned off. If hose is attached to an oscillating sprinkler, move the oscillating sprinkler and hose close to the spigot to allow the hose to retract freely.

 **WARNING:** Do not use hose with spiked sprinklers. The spike could dislodge and be propelled into people, animals, or objects, causing injuries and/or property damage.

Ground Sprinkler Application

1. Attach the sprinkler to the ball valve.
2. Turn the ball valve to off.
3. Turn the water on and allow the hose to fully expand.
4. Place the sprinkler in the desired location. Make sure the sprinkler is not facing you or others when you turn the ball valve on.

Trend Makers®
POWERFlexTM Hose
XTREME

30-DAY MONEY BACK GUARANTEE

Trend Makers is so confident that you will enjoy your product, that we cover every product with our 30-day Money Back Guarantee. However, if you decide that you don't love our product, your order is covered by our 30-day Money Back Guarantee which starts the day your product is delivered. You have 30 days to return or replace your product. Proof of purchase is required. Monetary refunds do not include original processing and handling fees. We do not price match.

Please contact us at customercare@trendmakersinc.com with any questions.

IF YOU DID NOT PURCHASE DIRECTLY FROM TREND MAKERS:

Please follow their return policy.

This product has been manufactured to the highest standards. Should you have any questions, our friendly customer service staff is here to help you. To contact us, email us at customercare@trendmakersinc.com.

©Copyright Trend Makers 2025.

Trend Makers®

Distributed by:
Trend Makers, LLC
Fort Walton Beach, FL 32547
PowerFlexTM Hose is a
trademark of Trend Makers, LLC

**Do not send returns or correspondence
to this address.**



WARNING:
Cancer and Reproductive Harm
www.P65Warnings.ca.gov

**Not for drinking water
for humans or animals.**

Made in China